

# BIKE CARRIER *wolder*

INSTRUCTIONS



**AUTOBIKE**  
**URBAN Z3**

## WOLDER BACK BIKE CARRIER

### WARNING


This product must be correctly installed before its use. An incorrect installation can produce damage to the bike carrier, your vehicle or even surrounding vehicles. The installation must be properly done to keep the bike on the tool and prevent it to fall in case of an accident. It is possible that this product can not be installed in the back of certain vehicles, due to their characteristics. If the indicated steps are followed and the product is correctly installed, it is guaranteed that your vehicle will not suffer any damage.

## 1.- Use Recommendations

- Always fix the bikes to the carrier with a strap.
- Don't put the bike wheel near the exhaust pipe. It can be damaged because of the high temperature.
- Check usually the carrier straps and replace them if you notice any damage. A damaged strap can be dangerous.
- Before the installation, check the bike carrier, with and without the bikes installed. The weight of the bikes can modify the tension of the straps.
- Check the tension of the straps every time you put or remove the bikes, or change the branches of the carrier.
- It is recommended to check the tension of the straps regularly, specially if you travel by roads with the surface in bad shape. If you detect that any of the bikes is moving, stop the vehicle immediately for its revision.

## 2.- Installation

- Take the bike carrier out of the cardboard box.
- Follow the steps of the manual indicated for your model of vehicle.

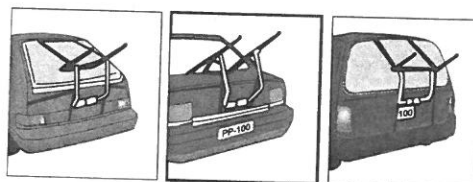


### 3.- Preparation

· Clean the surface of the vehicle and the hooks of the bike carrier before the installation.

### 4.- Fitting

· Spin the hand screw wheel of the bike carrier branch and put it in an angle between the bike carrier branch and the top surface of the vehicle smaller than  $20^{\circ}$ . Tighten the lock to fix the position.

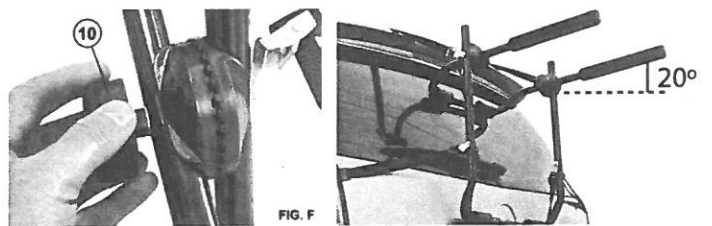

### 5.- Strap

· Put the straps on the brackets using the security locks.

### 6.- Installation on the vehicle

· Set the two superior hooks on the top part of the vehicle, holding it to the back door.

- Adjust and stretch the strap so it gets fixed.



7.-

- Put the straps on the brackets by using the security locks.
- Put the lower hooks on the lower part of the door. If it can be putted on this part, try to hold it to the chassis or the bumper.
- Make sure that the strap doesn't scrape against any element that can be broken. Adjust and stretch the strap so it gets fixed.

8.-

- Put the straps on the brackets by using the security locks.
- Hold the strap to both lateral sides of the rear part of the vehicle. Before this step, make sure the straps on the top and bottom of the vehicle are fastened. Then, fasten and fix the lateral straps. Once the tool is held with all the straps, tighten them up so it gets totally fixed. Before putting the bikes on, make sure all the straps are firmly fixed.

9.-

Put the bikes on the carrier and make sure they do not scrape against the rear part of the vehicle so it won't be damaged. The bike wheel must be at least 30 centimetres far from the vehicle.

- Use the other straps to fix the bike to the carrier. We recommend to fix all the parts of the bike.
- Once the bikes are held on the carrier, tight the straps up once again because they can have been loosened.
- It is necessary to check regularly if the strap is properly fastened. Check them from time to time, specially if you travel by roads with the surface in bad shape. If you detect that any of the bikes is moving, stop the vehicle immediately for its revision.

